


MSR Setting Program Quick Manual

1. Run "MSRSetterV2.1" Program

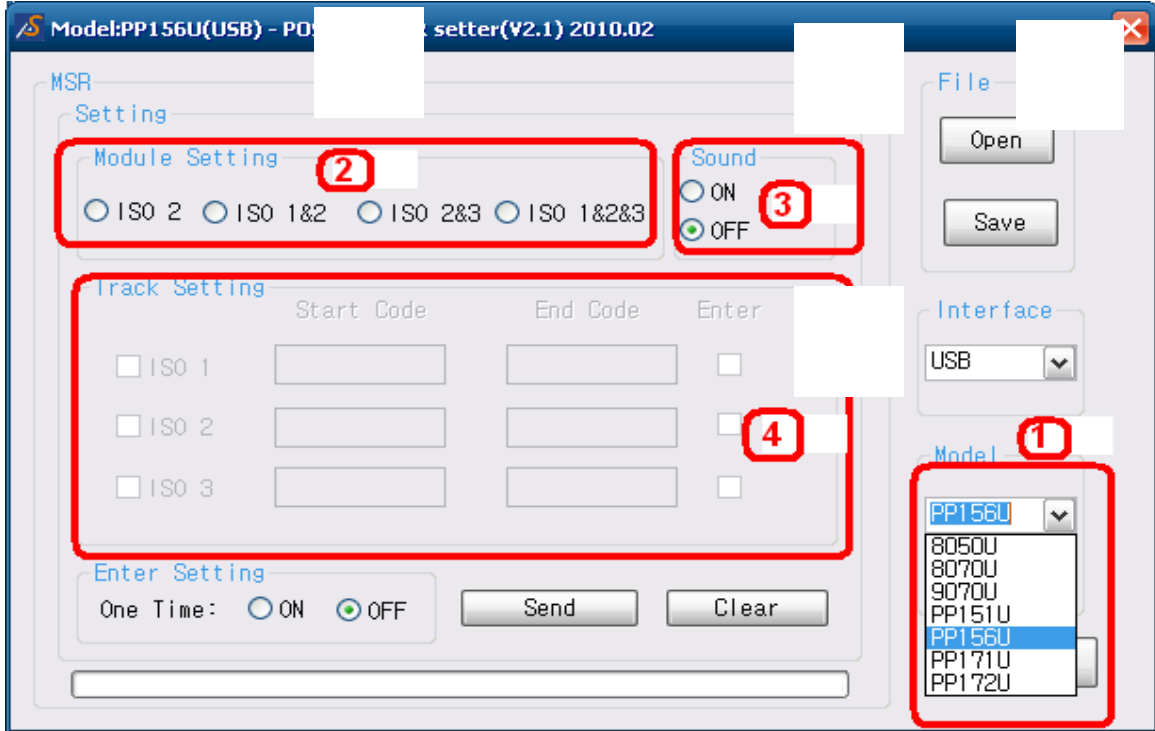

2. Set your MSR given model refer to below table same as Red mark ① and Press "Select" button

[Check the MSR Model]

POS Model	MSR Model
MICUS7 (USB I/F)	PP156U
MICUS20 (USB I/F)	PP172U
MICUS30 (USB I/F)	PP172U
MICUS37 (USB I/F)	PP172U
HS-S02A (PS2 & USB I/F)	PP151

3. Select Module Setting which you want to use in Red mark ②

If you want to use Track1 and Track 2, then select ISO1&2

4. Select Beep Function in Red mark ③

5. Edit Track Setting such as use Track number, Start Code, End Code, Enter in Red mark ④

For example, if you set ISO1&2 in area ②

Check ISO1 box , input Start character and End character, then check Enter
Also, check ISO2 box, input Start character and End character, then check Enter.

6. If all setting is finished, then press "Send"